



# Corvette C5 Exhaust Enhancer Installation Instructions

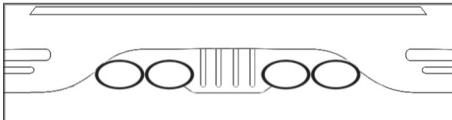


## STEP 1: CLEAN AREA

Clean raised area of ABS cover between exhaust pipes with Windex or other plastic-safe, non-residual cleaner.

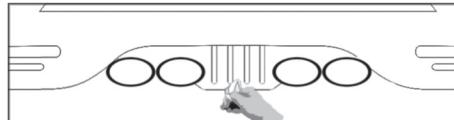


## STEP 2: PREP AREA

Prep the raised vertical mount areas with the supplied alcohol prep-pads.

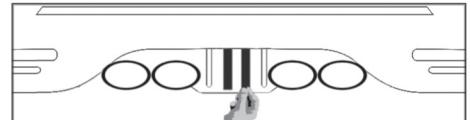

## STEP 3: PLACE ADHESIVE TAPE

Place (2) strips of the supplied tape to the raised center vertical ridges on the rear of the Corvette. Place the other (2) strips on the back of the plate at the left and right edges.

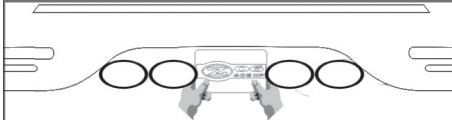

## STEP 4: POSITION PLATE


Carefully position the plate on the rear of the car by angling the plate outward so the bottom edge makes contact first. By lining up the bottom edge first, this supplies you with a point of reference to align the plate.

DO NOT install this product with your body positioned in anyway other than feet directly in front, under the vehicle, so you can be as close and centered on your targeted area. Once in position, hold the plate by its edges using your thumb and forefingers. Align only the bottom line of the tag, before verifying the following.



## STEP 5: PRESS PLATE

Once you are satisfied with the position you may press the plate with light pressure to ensure permanent placement.

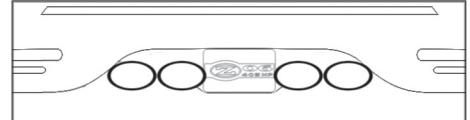


## STEP 6: ADMIRE INSTALLATION

Take a step back to admire your handy work. You may need to lightly polish the plate with a VERY soft cloth to remove any finger-prints that may have resulted from the installation.


**Eurosport**  
D·A·Y·T·O·N·A  
[www.eurosportdaytona.com](http://www.eurosportdaytona.com)

# Corvette C5 Exhaust Enhancer Installation Instructions

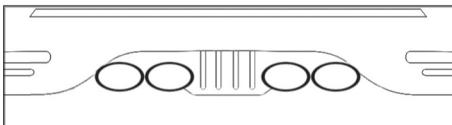


## STEP 1: CLEAN AREA

Clean raised area of ABS cover between exhaust pipes with Windex or other plastic-safe, non-residual cleaner.

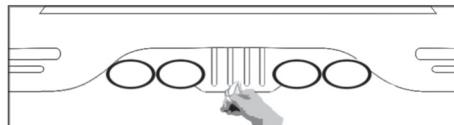


## STEP 2: PREP AREA

Prep the raised vertical mount areas with the supplied alcohol prep-pads.

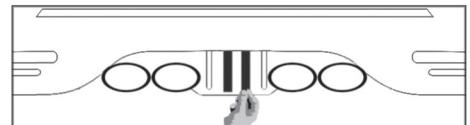

## STEP 3: PLACE ADHESIVE TAPE


Place (2) strips of the supplied tape to the raised center vertical ridges on the rear of the Corvette. Place the other (2) strips on the back of the plate at the left and right edges.

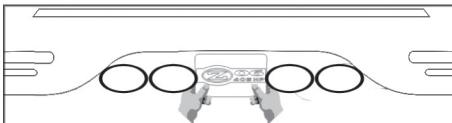

## STEP 4: POSITION PLATE


Carefully position the plate on the rear of the car by angling the plate outward so the bottom edge makes contact first. By lining up the bottom edge first, this supplies you with a point of reference to align the plate.

DO NOT install this product with your body positioned in anyway other than feet directly in front, under the vehicle, so you can be as close and centered on your targeted area. Once in position, hold the plate by its edges using your thumb and forefingers. Align only the bottom line of the tag, before verifying the following.

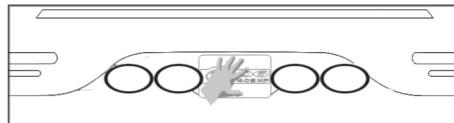

## STEP 5: PRESS PLATE

Once you are satisfied with the position you may press the plate with light pressure to ensure permanent placement.

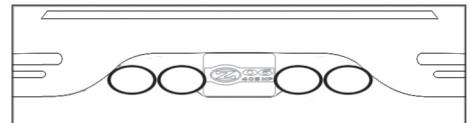

## STEP 6: ADMIRE INSTALLATION

Take a step back to admire your handy work. You may need to lightly polish the plate with a VERY soft cloth to remove any finger-prints that may have resulted from the installation.

**Eurosport**  
D·A·Y·T·O·N·A  
[www.eurosportdaytona.com](http://www.eurosportdaytona.com)