




www.EurosportDaytona.com

Corvette C6 Enhancer Installation Instructions

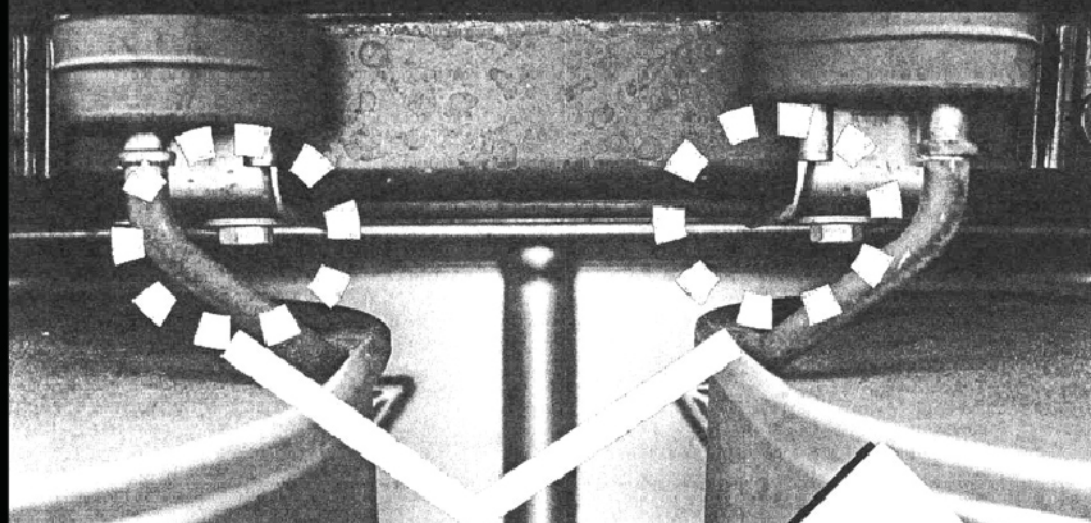

**Loosen exhaust hanger bolts.
DO NOT REMOVE!!
(Hex Head Steel Bolts 1/2"Head / 1"Long)**

Back of C6 Corvette



- Use a side-to-side motion to work the exhaust plate into place.
- Slide the plate into place under the bolts between the chassis and the "L" Brackets.
- Once in place, slide the plate sideways onto the loosened bolt then slide the other side up into the upward facing opening.
- Tighten bolts back down.